

# YOUR GUIDE TO EFFICIENT DISHWASHING

## 1 - PREPARATION


1. Check that ALL curtains and scrap trays are in place.
2. Check Washaid and Rinseaid levels - replace if necessary.



3. Check TEMPERATURES are:

WASH	60 - 65°C
FINAL RINSE	80 - 85°C

- A. Twin Dishwash Unit  
Single Tank/Front Loader/Lift Up Hood
- B. Twin Dishwash Unit  
Conveyor/Flight Machines

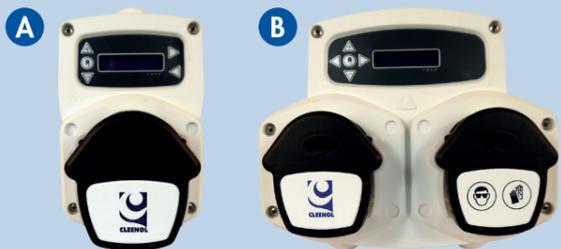

1. When changing product drums, always:
  - Wear goggles
  - Wear rubber gloves
2. Loosen product cap and carefully withdraw the tubing from the empty drum.
3. Carefully remove the empty drum and replace with a full drum in the correct position with the cap still on.
4. Break the cap seal, unscrew and remove the cap and gently insert the tube into the product.


NEVER UNDER ANY CIRCUMSTANCES USE WASHAID FOR MANUAL DISHWASHING.



## 2 - WASHING PROCEDURE


FOR BEST RESULTS

1. Remove food scraps from plates and dishes. Pour tea and coffee residues down sink/waste disposal unit.
2. For dried egg and sauces etc. pre soak in a hand wash detergent solution before placing into racks prior to washing.
3. Rinse/spray the manual pot wash detergent solution off before putting the racks into the dishwasher.

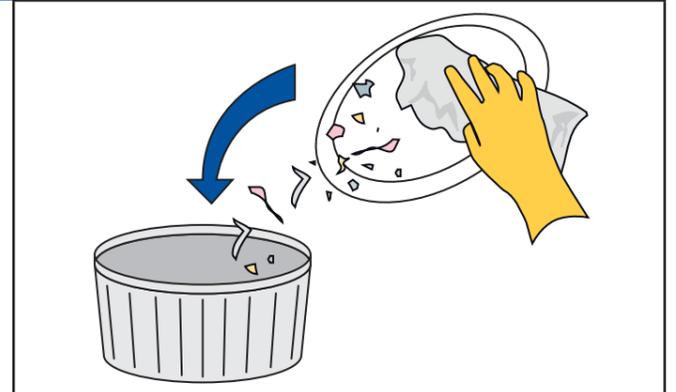


### TRAY STACKING


Correctly rack plates in same direction according to size.

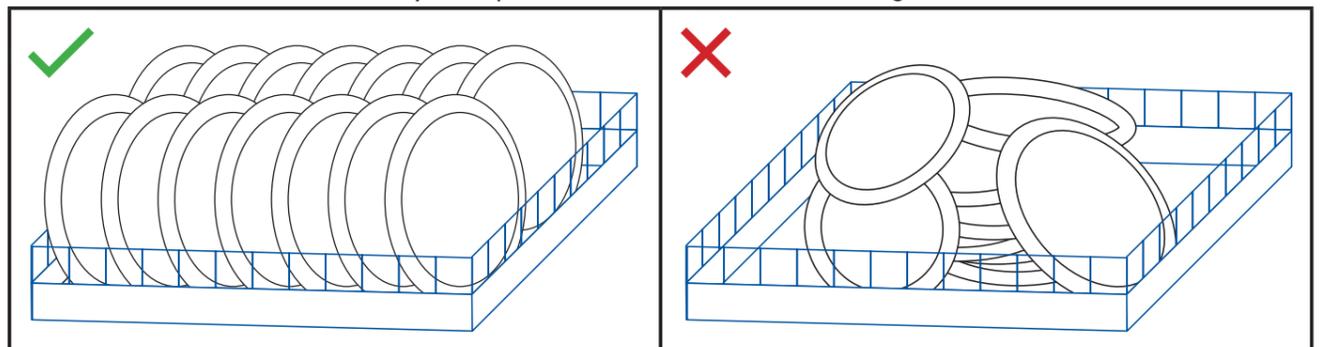

Correctly rack cups and bowls over sink.

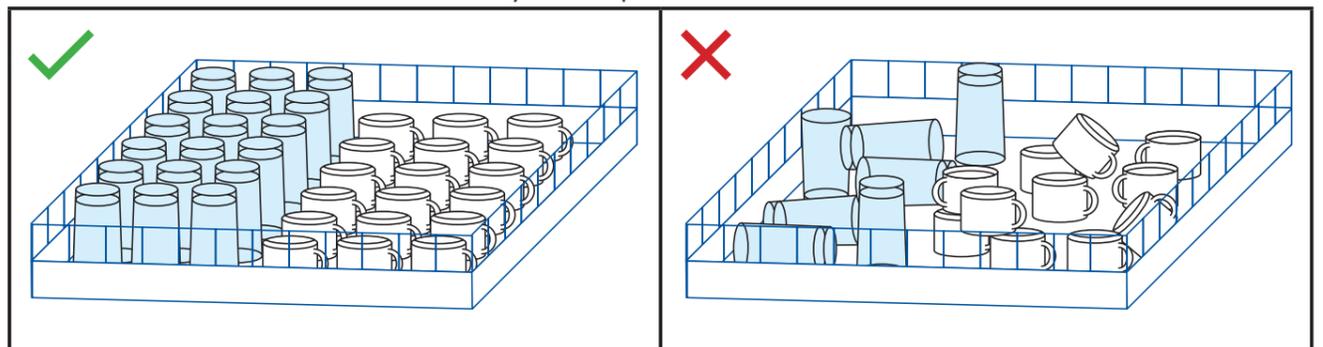

Correctly stack knives, forks and spoons in baskets.

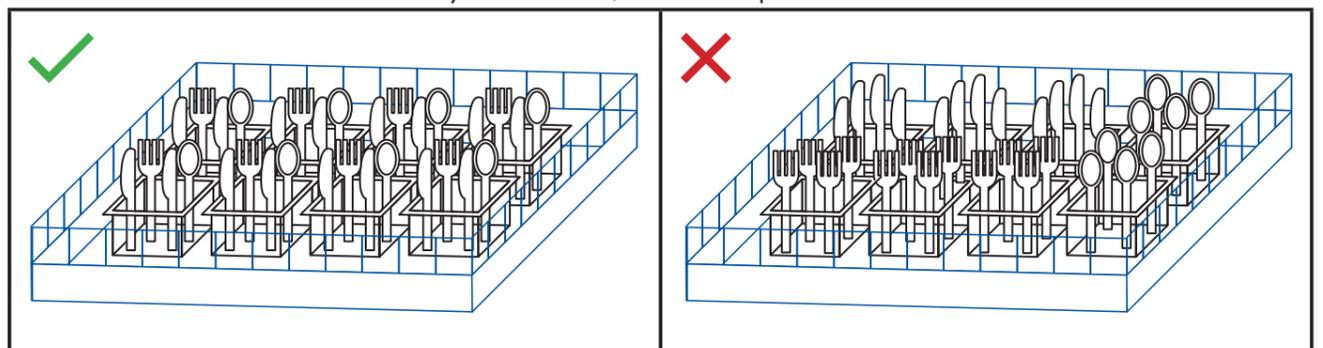

ALWAYS CHANGE THE WASH WATER REGULARLY AFTER EACH SESSION

## 3 - SHUT DOWN

1. EMPTY the machine
2. Remove the scrap trays and curtains and wash arms, clean thoroughly.
3. Clean out the inside of the dishwasher and leave doors open to air dry.
4. Switch off at the main electrical isolator.



For breakdowns or to arrange a service contact the service department using the details below.



**Cleenol Group Ltd**  
 @ ads@cleenol.co.uk  
 ☎ +44 1295 251721  
 🌐 www.cleenol.co.uk  
 📍 Beaumont Road, Banbury, OX16 1RB. UK.

# CLEENOL